


RAM-234-LK2 TOUGH TRAY LAPTOP LOCKING KIT INSTRUCTIONS

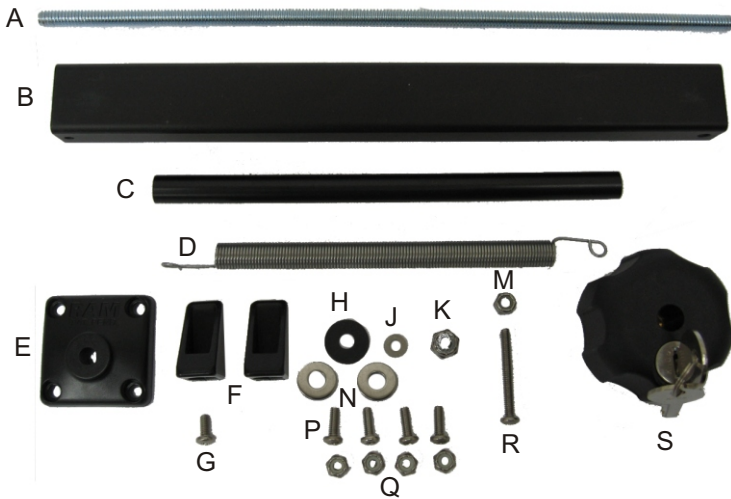


- A. 1/4"-20 X 10 1/2" LONG THREADED ROD
- B. 1" X 3/4" X 9 3/8" LONG STEEL TUBE
- C. 3/8" OD X 6 1/2" LONG TUBE
- D. SPRING
- E. PLASTIC FLANGE WITH BOSE
- F. PLASTIC WEDGES (2 QTY.)
- G. #8-32 X 3/8" LONG MACHINE SCREW
- H. 3/4" OD X 1/4" ID BLACK PLASTIC WASHER
- J. #8 FLAT WASHER
- K. 1/4"-20 NY-LOCK NUT
- M. #8-32 NY-LOCK NUT (THICK NUT)
- N. 1/4" FLAT WASHER (2 QTY.)
- P. #8-32 X 1/2" LONG MACHINE SCREW (4 QTY.)
- Q. #8-32 THIN NY-LOCK NUTS (4 QTY.)
- R. #8-32 X 1 1/2" LONG MACHINE SCREW
- S. LOCKING KNOB WITH 2 QTY. KEYS

NOTE: THREADS PROTRUDE 3/8"



STEP 1.
 THREAD (K) NUT ONTO (A) ROD WITH 3/8" OF (A) ROD PROTRUDING OUT OF (K) NUT, ASSEMBLE IN ORDER, 2 QTY. (F) WEDGES, 1 QTY. (N) WASHER, (C) TUBE & 1 QTY. (N) WASHER.

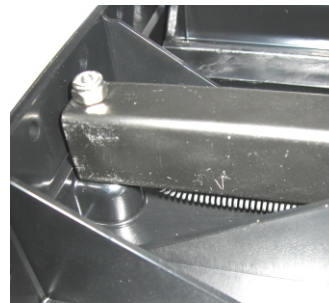



STEP 5.
 INSERT (B) TUBE INTO TOUGH TRAY MAIN HOUSING, (LARGE HOLE MUST BE ON END WITH SCREW) AND SLIDE IT OVER (R) SCREW AND GENTLY SECURE IT WITH (M) THICK NUT **NOTE: DON'T OVER-TIGHTEN!**

STEP 2.
 ATTACH (E) FLANGE TO MAIN TOUGH TRAY SLIDE USING (P) SCREWS & (Q) NUTS





STEP 6.
 PULL TOUGH TRAY MAIN SLIDE OUT OF MAIN HOUSING AND WEDGE IT AS SHOWN

STEP 3.
 INSTALL ONE END OF (D) SPRING USING #8-32 MACHINE SCREW & NY-LOCK NUT FROM **EXISTING** TOUGH TRAY (SCREW AND NUT NOT INCLUDED WITH THIS KIT)

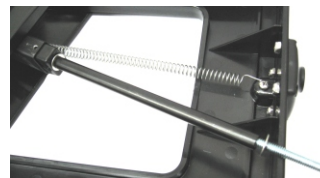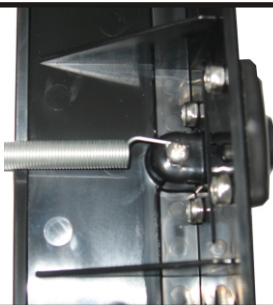

STEP 7.
 FULLY INSERT THREADED ROD ASSEMBLY FROM **STEP 1** INTO (B) TUBE UNTIL IT STOPS

STEP 4.
 ASSEMBLE THE TOUGH TRAY MAIN SLIDE INTO THE TOUGH TRAY MAIN HOUSING, INSERT (R) SCREW FROM TOP SURFACE INTO HOUSING AND SLIDE END OF (D) SPRING OVER (R) SCREW AS SHOWN

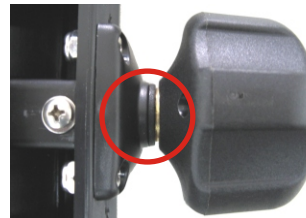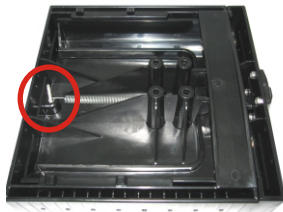

STEP 8.
 CLOSE MAIN TOUGH TRAY SLIDE OVER (A) THREADED ROD, INSTALL (H) WASHER, LUBRICATE TREADS WITH OIL OR GREASE THEN INSTALL (S)

File# ram234lk2_instructions