

**Item Number**  
RAM-VB-121

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
**CHRYSLER TOWN & COUNTRY** (1996-2004)  
**PLYMOUTH VOYAGER** (1996-2004)  
**DODGE CARAVAN** (1996-2004)

## SPECIFICATIONS

### Placement

Drivers side on inner front and back seat studs

### Drilling Required

No - uses existing seat bolts

### Seat Configuration

Bucket/Bench

### Pole or Pedestal

Included on base

### Construction/Finish

Steel/Black Powdercoat

### Weight

10.5 lbs.

### Dimensions


A = 17.8", B = 5.5", C = 11.25"



Shown In Use

## Features

Installs in minutes with no drilling required

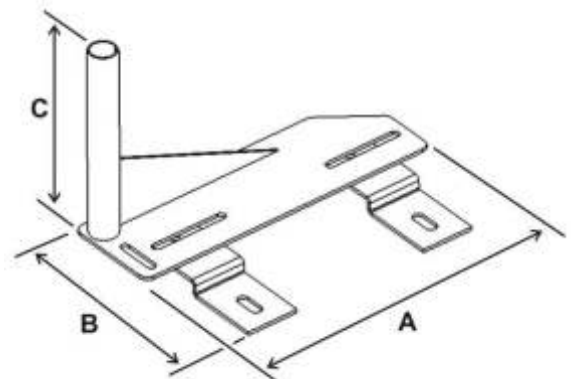

RAM-VB-121

## Misc.

Rugged Steel Construction

Lifetime warranty

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-121

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
**CHRYSLER TOWN & COUNTRY** (1996-2004)  
**CHRYSLER VOYAGER** (1996-2004)  
**DODGE CARAVAN** (1996-2004)

## INSTALLATION INSTRUCTIONS

1. Remove the seat bolts that hold the right side of the driver's seat to the floor.
2. Loosely assemble legs to the base. Do not firmly tighten.
3. Place mounting base to the right side of the driver's seat. Align mounting legs to the seat bolt holes and tighten in place.
4. Gently lift the inside of the seat upward to allow the seat frame to clear the studs.
5. Place the base between the seat frame and align the holes in the base with the seat studs.
6. Lower the seat back down over the no drill base and seat studs.
7. Fully tighten factory hardware to secure base in place along with seat frame.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

