

Item Number
RAM-VB-173

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
SCION XB (2008-NEWER)
TOYOTA COROLLA (2010)
TOYOTA PRIUS (2010)
TOYOTA MATRIX (2009)
PONTIAC VIBE (2009)

SPECIFICATIONS

Placement

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Pole or Pedestal

Sold Separately

Construction/Finish

Steel/Black Powdercoat

Weight

6 lbs.

Dimensions

A = 18.125", B = 9.375", C = 1.375"

Hole Centers = 14.312"

Features

Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space


Misc.

Rock solid construction

Lifetime warranty



Shown In Use

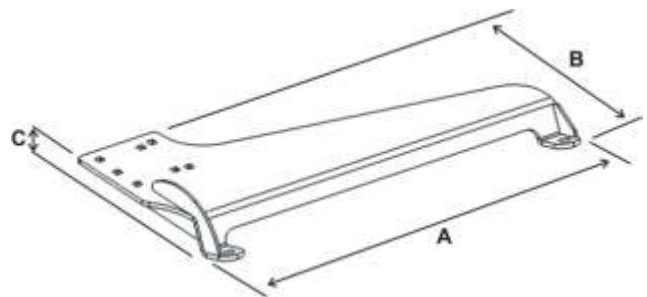

RAM-VB-173

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-173

RAM No-Drill™ Seat Bases
National Products, Inc.

Vehicle base for the
SCION XB (2008-NEWER)
TOYOTA COROLLA (2010)
TOYOTA PRIUS (2010)
TOYOTA MATRIX (2009)
PONTIAC VIBE (2009)

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side. This will require a 14mm socket wrench. If installing into a 2010 Corolla or Prius, you will need the two short sections of pipe, stand-offs, and the longer seat leg bolts. See notes below then proceed with remaining instructions.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.

For 2010 Corolla or Prius, place the stand offs over the seat leg holes. Next rest the base over the stand offs and align the holes through to the floor board. Start the thread of the supplied bolts into the floor board by hand. Once they are started, use a 17mm socket to tighten. Tighten the center bolt first, then the bolt closest to the door. The bolt closest to the door may require the use of a 17mm box end wrench to fully tighten the bolt for clearance reasons. The base may touch the center hump of the vehicle and the carpeting in some vehicles due to variations in the carpeting.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

