

Item Number
RAM-VB-178

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the DODGE RAM 1500 to 5500 TRUCKS (2008-NEWER)

SPECIFICATIONS

Placement

Passenger side on the floor, at front of seat

Drilling Required

No - uses existing seat bolt holes

Seat Configuration

Bucket / Split Bench

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 14.75", B = 3.8", C = 1.75"

Hole Center = 13.25"

Pole or Pedestal

Sold Separately

Weight

2.1 lbs.

Features

Installs in minutes with no drilling required
Low profile keeps mount away from passenger leg space
Won't interfere with levers or factory-installed console or 4WD lever


Misc.

Designed to accommodate trucks with PTO or under seat air duct.
Rock solid construction
Lifetime warranty

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

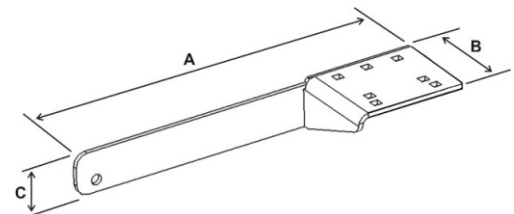

RAM-VB-178



Item Number
RAM-VB-178

RAM No-Drill™ Seat Bases
National Products, Inc.

**Vehicle base for the
DODGE RAM 1500 to 5500 TRUCKS
(2008-NEWER)**

INSTALLATION INSTRUCTIONS

Tools needed are a socket wrench with extension, 15MM socket, 13MM socket.

Note that on some trim levels a plastic cover blocks access to the outermost seat leg bolt. This cover has to be removed and stored for installation into Crew or Quad cab models. It can be put back in place after installation on standard cab models.

Regular and extended cab models:

1. Move the passenger seat back to its rear-most position and remove the two front seat rail bolts on the passenger side using the 15MM socket. These pass through the seat frame legs into the floor board.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.

Crew or quad cab models with under seat air duct:

1. Move the passenger seat back to its rearmost position and remove the two front seat rail bolts on the passenger side using the 15MM socket. Store these so that they can be reinstalled should the laptop stand be removed later.
2. This kit comes with 2 small stand offs shaped like short sections of pipe, two longer seat leg bolts, and two flat washers. Pass the bolts through the flat washers and then each through the holes on the no drill base.
3. Place the stand off over the hole in the seat frame leg. The stand off goes in between the seat frame leg and the no drill base providing a gap to clear the under seat air duct in some vehicle models.
4. With the stand off in place and the bolt now passing through the stand off, start the thread by hand on each bolt.
5. Once the bolt is started, use the 13MM socket to fully tighten the seat leg bolt.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

